



Dear VISIONQUEST Customer,

Congratulations on your new VISIONQUEST 32"HDTV purchase. Thank you for your support. For maximum benefit of your set, please read these instructions before making any adjustments, and retain them for future reference. We hope you will experience years of enjoyment from your new VISIONQUEST 32"HDTV.

For assistance, please call 1-877-851-2528.

We recommend you register your VISIONQUEST 32" HDTV either at our website **WWW.VISIONQUESTCE.COM** or fill in your registration card and mail it in. For peace of mind and to protect your investment beyond the standard warranty, VISIONQUEST offers extended warranty service plans. These plans give you additional coverage during the standard warranty period. Visit our website or call us to purchase a plan.

Write down your Serial Number located on the back of your 32"HDTV .

S/N: _____



Purchase Date _____


IMPORTANT SAFETY INSTRUCTION

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturers instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including Amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Unplug this apparatus during lightning storms or when unused for long periods of time.
13. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
14. Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
15. Splashing The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, splashing and no objects filled with liquids such as vases, shall be placed on the apparatus.
16. A warning that an apparatus with class I construction shall be connected to a MAINS socket outlet with a protective earthing connection.
17. Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.



IMPORTANT SAFETY INSTRUCTION

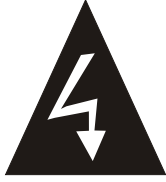	<div>CAUTION</div> <div>RISK OF ELECTRIC SHOCK</div> <div>DO NOT OPEN!</div>	
<p>CAUTION</p> <p>TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USE-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>		

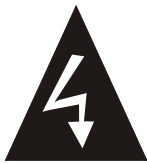

The symbol indicates that dangerous voltage constituting a risk of electric shock is present within this unit.



The symbol indicates that there are important operating and maintenance instructions in the literature accompanying this unit.

WARNING:

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

POWER SUPPLY:

Connect AC100--240V, 50/60Hz, 200W output to this unit's power socket. The core of the socket is positive pole. Sheet metal outside is cathode.

PREFACE

Thank you very much for purchasing this TV. To enjoy your set to the finest from the very beginning, read this manual carefully and keep it handy for future reference.


INSTALLATION

- Position the TV in the room where light does not strike the screen directly.
- Total darkness or a reflection on the picture screen can cause eyestrain. Soft and indirect lighting is recommended for comfortable viewing.
- Allow enough space between the TV and the wall to permit ventilation.
- Avoid excessive warm locations to prevent possible damage to the cabinet or premature component failure.
- This AC power can be connected to AC 100-240 volts. 50/60Hz.
- Do not cover the ventilation openings when using the TV.

CAUTION


Never tamper with any components inside the TV, or any other adjustment controls not mentioned in this manual. All LCD- TVs are high voltage instruments. When you clean up dust or water drops on the LCD PANEL or CABINET, the power cord should be pulled out from the receptacle, then wipe the receiver with dried soft cloth. During thunder and lightning, unplug the power cord and antenna cord to prevent damage to your TV. All repairs to this TV should only be performed by the TV service personnel.

WARNINGS AND CAUTIONS

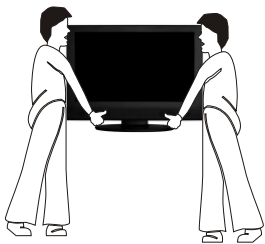


Caution

Carry the set requires two or more people.

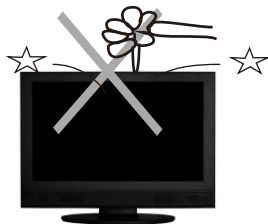


Caution

Do not drop or push objects into the television cabinet slots or openings. Never spill any kind of liquid on the television receiver.

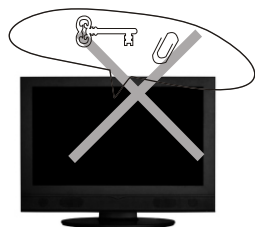

Caution

Do not insert anything in the ventilation holes. If metal or something flammable enters, it may result in fire or electric shock.

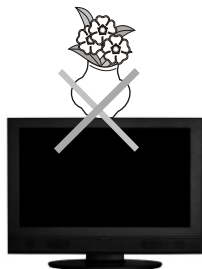

Caution

Do not place objects on this unit, it may damage the screen surface.



Caution

Do not squash power supply cord under the television receiver.



Caution

Do not throw anything at the set. The screen glass may explode by impact and cause serious injury.

THIS PRODUCT HAS BEEN TESTED AND FOUND TO COMPLY WITH REGULATORY SAFETY CERTIFICATIONS.

This product is designed and manufactured to operate within defined design limits, and misuse may result in electric shock or fire. To prevent the product from being damaged, the following rules should be observed for the installation, use and maintenance of the product. Read the following safety instructions before operating the display. Keep these instructions in a safe place for future reference.

- * To avoid the risk of electric shock or component damage, switch off the power before connecting other components to the LCD TV.
- * Unplug the power cord before cleaning the LCD TV. A damp cloth is sufficient for cleaning the LCD TV. Do not use a liquid or a spray cleaner for cleaning the product. Do not use abrasive cleaner.
- * Always use the accessories recommended by VISIONQUEST to insure compatibility.
- * When moving the LCD TV from an area of low temperature to an area of high temperature, condensation may form on the housing. Do not turn on the LCD TV immediately after this to avoid causing fire, electric shock or component damage.
- * Do not place the LCD TV on an unstable cart, stand, or table. If the LCD TV falls, it can injure a person and cause serious damage to the appliance.
- * A distance of at least 3 feet should be maintained between the LCD TV and any heat source, i.e. radiator, heater, oven, amplifier etc. Do not install the product close to smoke. Operating the product close to smoke or moisture may cause fire or electric shock.
- * Slots and openings in the back and bottom of the cabinet are provided for ventilation. To ensure reliable operation of the LCD TV and to protect it from overheating, be sure the openings are not blocked or covered. Do not place the LCD TV in a bookcase or cabinet unless proper ventilation is provided.
- * Never push any object into the slot on the LCD TV cabinet. Do not place any objects on the top of the product. It could short circuit parts causing a fire or electric shock. Never spill liquids on the LCD TV.
- * The LCD TV should be operated only from the type of power source indicated on the label. If you are not sure of the type of power supplied to your home, consult your local power company.
- * The power cable must be replaced when using different voltage from that specified in the User Manual. For more information, contact VISIONQUEST.
- * The LCD TV is equipped with a three-pronged grounded plug, a plug with a third (grounding) pin. This plug will fit only into a grounded power outlet as a safety feature. If your outlet does not accommodate the three-wire plug, have an electrician install the correct outlet, or use an adapter to ground the appliance safely. Do not defeat the safety purpose of the grounded plug.
- * Do not overload power strips and extension cords. Overloading can result in fire or electric shock.
- * The wall socket should be installed near the equipment and should be easily accessible.
- * Do not touch the power cord during lightning. To avoid electric shock, avoid handling the power cord during electrical storms.
- * Unplug the unit during a lightning storm or when it will not be used for long period of time. This will protect the LCD TV from damage due to power surges.
- * Do not attempt to repair or service the product yourself. Opening or removing the back cover may expose you to high voltages, the risk of electric shock, and other hazards. If repair is required, please contact VISIONQUEST and refer all servicing to qualified service personnel.
- * Keep the product away from moisture. Do not expose this appliance to rain or moisture. If water penetrates into the product, unplug the power cord and contact VISIONQUEST. Continuous use in this case may result in fire or electric shock.
- * Do not use the product if any abnormality occurs. If any smoke or odor becomes apparent, unplug the power cord and contact VISIONQUEST immediately. Do not try to repair the product yourself.
- * Avoid using dropped or damaged appliances. If the product is dropped and the housing is damaged, the internal components may function abnormally. Unplug the power cord immediately and contact VISIONQUEST for repair. Continued use of the product may cause fire or electric shock.
- * Do not install the product in an area with heavy dust or high humidity. Operating the product in environments with heavy dust or high humidity may cause fire or electric shock.
- * Hold the power connector when removing the power cable. Pulling the power cable itself may damage the wires inside the cable and cause fire or electric shock. When the product will not be used for an extended period of time, unplug the power connector.
- * To avoid risk of electric shock, do not touch the connector with wet hands.
- * Insert batteries in accordance with instructions while using the remote control. Incorrect polarities may cause damage and leakage of the batteries, operator injury and contamination of the remote control.
- * If any of the following occurs, please contact VISIONQUEST:
 - * The power connector fails or frays.
 - * Liquid sprays or any object drops into the LCD TV.
 - * The Display is exposed to rain or other moisture.
 - * The Display is dropped or damaged in any way.
 - * The performance of the Display changes substantially.
- * Operating environment: Temperature : 40°F~95°F, Humidity: 10% to 90% non-condensing, Altitude: 0~10,000ft.


Note: In some countries or regions, the shape of the power plug and power outlet may sometimes differ from that shown in the explanatory drawings. However, the method of connecting and operating the unit is the same.

Television Antenna Connection Protection

External Television Antenna Grounding

If an outside antenna/satellite or cable system is to be connected to the LCD TV, make sure that the antenna/satellite or cable system is electrically grounded to provide some protection against voltage surges and static charges.

Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of the grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements of the grounding electrode.

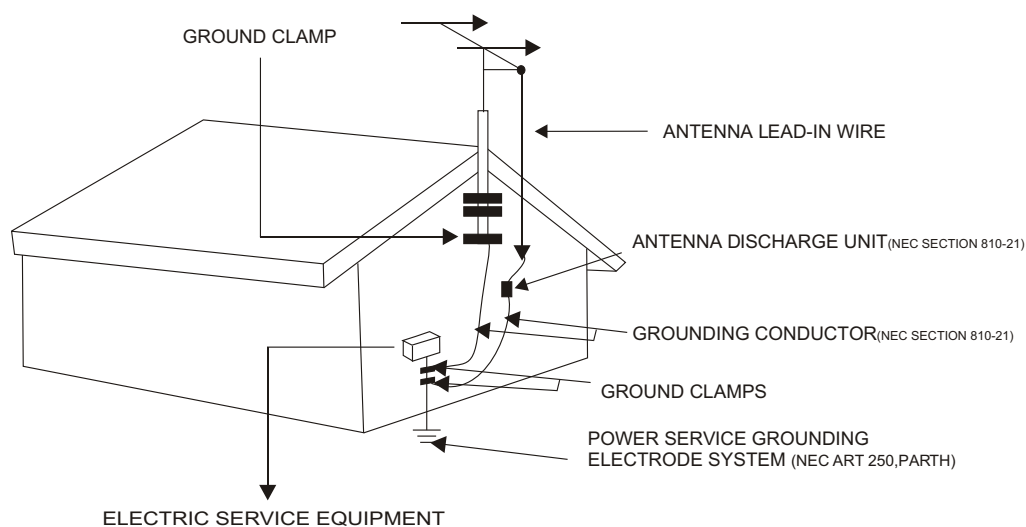

Lightning Protection

For added protection of your LCD TV during a lightning storm or when it is left unattended or unused for long periods of time, unplug the LCD TV from the wall outlet and disconnect the antenna/satellite or cable system.

Power Lines

Do not locate the antenna near overhead light or power circuits, or where it could fall into such power lines or circuits.

Opening the package

Your VISIONQUEST 32" HDTV is packaged in a carton together with other standard accessories. Any optional accessories would be packed separately in another carton.

The weight of the LCD display is approximately 36 lb. Due to the size and weight of the product, it is suggested that it be handled by a minimum of 2 persons. Since the glass can be easily scratched or broken, please handle the product gently. Never place the unit on a surface with the glass facing downwards unless it is on protective padding. When opening the carton, check that the product is in good condition and that all standard accessories and items are included.

IMPORTANT: Save the original box and all the packing material for future shipping needs.

Package Contents

VISIONQUEST 32" HDTV

VISIONQUEST Remote Control

Power Cord

User's Guide

Quick Setup Guide

Warranty Card



Note: Optional components sold separately.

Installation Preparation

Please read the user manual carefully before performing the installation.

The power consumption of the display is approximately 200 watts, please use the power cord designated for the product. When an extension cord is required, use one with the correct power rating. The cord must be grounded and the grounding feature must not be defeated.

The product should be installed on a flat surface to avoid tipping. Space should be maintained between the back of the product and the wall for proper ventilation. If you would like to mount the TV to the wall, please see "Preparing the LCD for Wall Mounting" below for additional information. Avoid installing the product in the kitchen, bathroom or other places with high humidity, dust or smoke, to not shorten the service life of the electronic components.

Please ensure the product is installed with the screen in landscape orientation. Any 90° clockwise or counter clockwise installation may induce poor ventilation and excessive component damage.

Preparing Your LCD TV FOR Wall Mounting

The VISIONQUEST 32" HDTV can either be kept on the stand base or mounted to the wall for viewing. If you choose to mount the 32" HDTV to the wall, please refer to the schematic drawing when hanging the TV on the wall. Take off the stand from the whole unit then assembly the TV on VESA standard wall mount devices. (The distance dimension of the hanging hole is 400*200). Our TV is VESA(400*200mm) compatible.

Refer to drawing below:

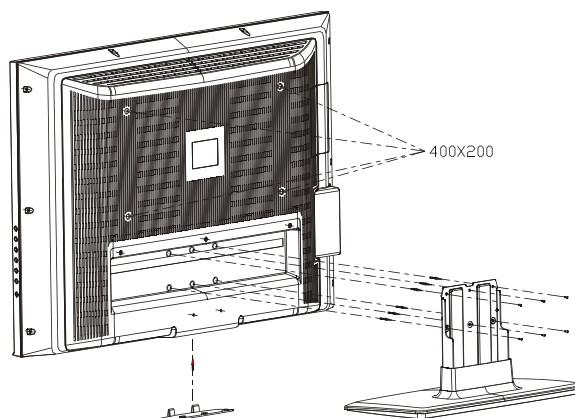


Table of Contents

Chapter 1-Basic Controls and Connections

1.1-Front Panel Controls.....	11
1.2-Side Panel Controls.....	11
1.3-Rear Panel Connections.....	12
1.4-VISIONQUEST Remote Control Button Description.....	13
1.4.1-Insertion of Batteries in the Remote Control.....	15
1.4.2-Remote Control Range.....	15
1.4.3-Precautions for the VISIONQUEST Remote Control.....	15

Chapter 2-Connecting Equipment

2.1-Which Video Connection Should I Use?.....	16
2.2-Connecting your DVD Player.....	17
2.2.1-Using HDMI(Digital HD).....	17
2.2.2-Using Component(Analog HD) Video.....	19
2.2.3-Using S-Video.....	20
2.2.4-Using Composite(AV) Video.....	21
2.3-Connecting Your HDTV Set-Top Box.....	22
2.3.1-Using HDMI (Digital HD).....	22
2.3.2-Using VGA Video.....	24
2.4-Connecting Your VCR or Video Camera.....	25
2.5-Connecting Coaxial(RF).....	26
2.5.1-Using Your Antenna or Cable for TV.....	26
2.5.2-Using the Antenna or Cable through Your VCR.....	27
2.6-Connecting an Amplifier or Speakers.....	28
2.7-Connecting a Computer.....	29

Chapter 3-Setting Up to Watch TV

3.1-Basic LCD TV Start Up.....	30
3.2-Watching a TV Program.....	31
3.3-Adjusting Basic LCD TV Settings.....	31
3.4-Using the On-Screen Display(OSD).....	32
3.4.1-OSD Menu Operations.....	32
3.4.2-Video.....	34
3.4.3-Audio.....	35
3.4.4-TV.....	36
3.4.5-Setup.....	37
3.4.6-Parental.....	38
3.4.7-Channel Information.....	40
3.4.8-Programm Information.....	41
3.4.9-Picture-in-Picture(PIP)/Picture-by-Picture(POP) Mode.....	42
3.4.10-Adjusting Basic PIP/POP Settings.....	42

Chapter 4-Maintenance and Troubleshooting

4.1-Maintenance.....	43
4.2-Troubleshooting Guide.....	43
4.3-Telephone and Technical Support.....	45
4.4-Compliance.....	46
4.5-FCC Class B Radio Frequency Interference Statement.....	46

Specifications	47
-----------------------------	----

PC Compatibility Chart	47
-------------------------------------	----


Glossary-Standard Definitions	48
--	----

Chapter 1 -Basic Controls and Connections

1.1 - Front Panel Controls




1.2 - Side Panel Controls

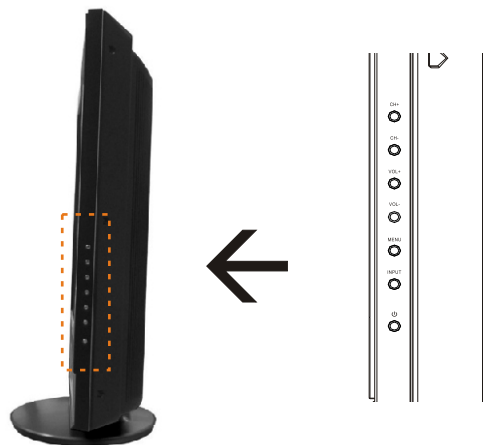

- 1.CH(+/-)-These buttons increase or decrease the channels. When the OSD is active, these buttons are used to select OSD options.
- 2.VOL(+/-)- These buttons increase or decrease volume. When the OSD is active, these buttons adjust the OSD options.
- 3.MENU - This button opens the TV OSD menu.
- 4.INPUT-This button switches between the available input sources in the sequence: Composite1, Composite2, S-Video, Component1,Component2,VGA, HDMI1,HDMI2, TV, Press the button repeatedly to cycle through the available options.
- 5.Power Button(⏻)-Switch the LCD TV on by pressing the button once. Press the button again to turn the LCD TV off.

1.3 - Rear Panel Connections

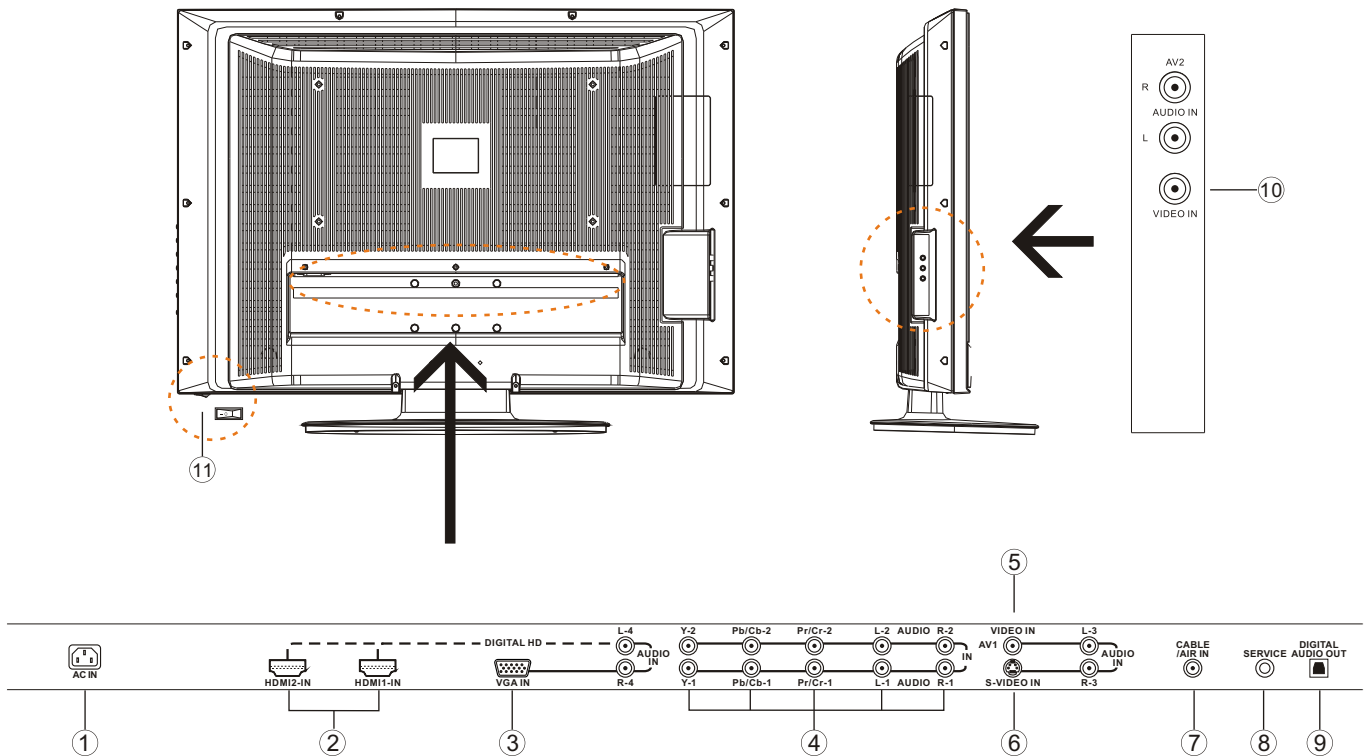

1.AC IN - Power Input.

2.HDMI IN - Connect a DVD multimedia player, or set-top box and the audio through this connection. For users who want to connect a DVI enabled device, use an HDMI-DVI cable and use the Analog Audio output of the device connected to the L+R Audio here.

3.VGA IN - Connect the video and the audio from a computer or set-top box here.

4.Y-Pb/Cb-Pr/Cr-with Audio L/R - Connect the primary source for component video, such as a DVD player or set-top box here, From left to right, use the green for Y, blue for Pb(or Cb), red for Pr(or Cr), white for left audio and red for right audio inputs.

5&10.VIDEO IN -Connect the primary source for composite devices, such as a VCR or video game console. Use the white and red connectors to connect the external audio from the same source.

6.S-VIDEO IN - Connect the primary source for S-Video devices, such as a VCR or videogame console. Use the white and red connectors to connect the external audio from the same source.

7.CABLE /AIR IN - Connect to an antenna, or cable service.

8.SERVICE - This custom communication port is for factory service only.

9.DIGITAL AUDIO OUT - The digital audio will be available on this output for connection to your home theatre system.

11.POWER SWITCH - When switch this off, please don't switch it back on within five seconds.

1.4-VISIONQUEST Remote Control Button Description

- **POWER**- Press this key to turn the TV on from standby mode. Press it again to return to the standby mode.
- **MUTE**-This button turns the sound on and off.
- **SLEEP**-This button allows the user to select the sleep options by adjusting the timer in 10 minute increments up to 120 minutes.
- **MTS**-This button will select the MTS options in an analog program mode. Options include: Stereo, SAP or Mono; Additionally changing the audio language in an digital program.
- **TV**-This button is used to select the input source -TV.
- **Number Button Pad**-Use these buttons to select a channel or enter a password.
- **INPUT**- To display the input source list to change the input source.
- **EXIT**-To close the current OSD page or function.
- **MENU**-To display and close the menu.
- **INFO**-This button displays the image and system information display.
- **ENTER**-To display the channel list.
To add and erase the favorite channel when the favorite list displays.
To un-lock the locked channel or program.
To access the item or page.
To auto adjust the VGA input source.
- **▲▼◀▶** These buttons navigate the On-Screen Display(OSD) menu.
- **RED/GREEN/YELLOW/BLUE** button-These are short-cut buttons, using them with the hint OSD menu.
- **FREEZE**-To hold the active video.
- **V-CHIP**- Press to popup a pin-code dialog box to set the viewing rating.
- **CC**-To select the closed caption temporary.
- **VOL(+or-)**-These buttons turn volume up or down.
- **GUIDE**-To display and close the EPG.
- **SYSTEM**-Press repeatedly to select tuner mode: Antenna/Cable
- **CH(+or-)**-These buttons change the channels up or down.



- SOUND**-Press repeatedly to select sound mode: Off, Rock, POP, Live, Dance, Techno, Classic, Soft.
- PICTURE**-Press repeatedly for different picture modes select: Normal/User/cinema/Sport/vivid/Hi-bright.
- RETURN**-Press it to return to the previous channel in TV mode.
- MODE**-Use this button to activate the PIP mode and select the mode by pressing repeatedly.
- SWAP/SCREEN**-Used to swap the inputs from the main screen and the sub-screen while in the PIP mode, Additionally Press repeatedly to select the viewing mode: Auto/Normal/Zoom/Panorama/Dot by Dot.
- SIZE/ZOOM**- Press this button to select the size of the PIP screen from one of the following: small, medium or large in PIP mode, Additionally press it to zoom the image.
- POS/FAV.LIST**-Press this button to change the PIP window position in PIP mode. Additionally press it to show the favourite program list.
- ADD/DEL**-Press this button to add/delete current channel to/from the list of favorite programs.
- SELECT**- Press it to select the program directly from the list of favorite channel you preset.
- AV**-Repeated pressing of this button will cycle through Composite1,Composite2,S-Video inputs.
- HD**-Repeated pressing of this button will switch between the Component1/Component2 input and HDMI1,HDMI2 mode.
- VGA**-This button selects a connected VGA input.



1.4.1-Insertion of Batteries in the Remote Control

Insert two AAA batteries into the remote control. Make sure that you match the (+) and (-) symbols on the batteries with the (+) and (-) symbols inside the battery compartment. Re-attach the battery cover.

Precautionary Tips for Inserting the Batteries:

- Only use the specified AAA batteries.
- Do not mix new and old batteries. This may result in cracking or leakage that may pose a fire risk or lead to personal injury.
- Inserting the batteries incorrectly may also result in cracking or leakage that may pose a fire risk or lead to personal injury.
- Dispose of the batteries in accordance with local laws and regulations.
- Keep the batteries away from children and pets.



1.4.2-Remote Control Range

- Point the remote control at the remote control sensor to transmit the commands.
- Do not place any obstacles between the remote control and the receiver window.
- The effective range of the remote control is approximately 32 feet (10 meters) from the front of the receiver window, 30° to the left and right, 20° up and down.







1.4.3-Precautions for the VISIONQUEST Remote Control

- The remote control should be kept dry and away from heat sources. Avoid humidity.
- If the display responds erratically to the remote control or does not respond at all, check the batteries. If the batteries are low or exhausted, replace them with fresh batteries.
- When not using the remote control for a long period of time, remove the batteries.
- Do not take apart the batteries, heat them, or throw them into a fire.
- Do not subject the remote control to undue physical stress, such as striking or dropping it.
- Do not attempt to clean the remote control with a volatile solvent. Wipe it with a clean, damp cloth.

Chapter 2 - Connecting Equipment

2.1- Which Video Connection Should I Use?

The VISIONQUEST 32" HDTV has five different ways to connect your video equipment from a basic connection to the most advanced for digital displays.

Connection Quality (type)	Connector	Description
Best (digital)		Digital HD(HDMI-High-Definition Multimedia Interface)- It is the first and only industry-supported, uncompressed, all-digital audio/video interface. HDMI provides an interface between any audio/video source, such as a set-top box, DVD player, or A/V receiver and an audio and/or video monitor, such as a digital television, over a single cable.
Best (digital)		DTV RF comes from AIR or CABLE. When used for MPEG2 encoded bit streams from ATSC broadcast programming, this input takes advantage of the High Definition content.
Better (analog)		Analog VGA(RGB)-This video input has separate red, green and blue color components. The signal carries horizontal and vertical sync information on the green signal. This is most commonly used for PC input.
Better (analog)		Analog HD1/HD2(Component)-The video signal is separated into three signals, one containing the black-and-white information and the other two containing the color information. This enhancement over S-Video takes advantage of the superior picture provided by progressive scan DVD players and HDTV formats.
Good (analog)		S-Video-The video signal is separated into two signals one containing the black-and-white information and the other containing the color information. Separating the color in this way avoid "cross color" effects where closely spaced black and white lines are erroneously displayed in color. It also enables text to be displayed more sharply.
Good (analog)		AV- The complete video signal is carried through this single pin connector. This is the most commonly used video connection.

2.2 - Connecting Your DVD Player

You have several for connecting your DVD player to your new 32"HDTV-HDMI(Digital HD), Component (Analog HD), S-Video, and Composite (AV) inputs. Based on your home theater configuration, you decide which option is the right one for you.


2.2 .1- Using HDMI (Digital HD)

DVD players that have a digital interface such as HDMI (High-Definition Multimedia Interface) should be connected to the HDMI input of the VISIONQUEST 32"HDTV for optimal results.


Note: To maintain the display, use a VISIONQUEST certified HDMI cable available up to 10 meters or less. See WWW.VISIONQUESTCE.COM or call 1-877-851-2528

Connecting DVD Player(Best):

1. Turn off the power to the LCD TV and DVD player.
2. Connect a HDMI cable to the HDMI output of your DVD player and the other end to the HDMI1 input in the rear of your LCD TV.
3. Turn on the power to the LCD TV and your DVD player.
4. Select HDMI1 using the INPUT button on the front of the LCD TV or directly by pressing the HD button on the Remote Control.

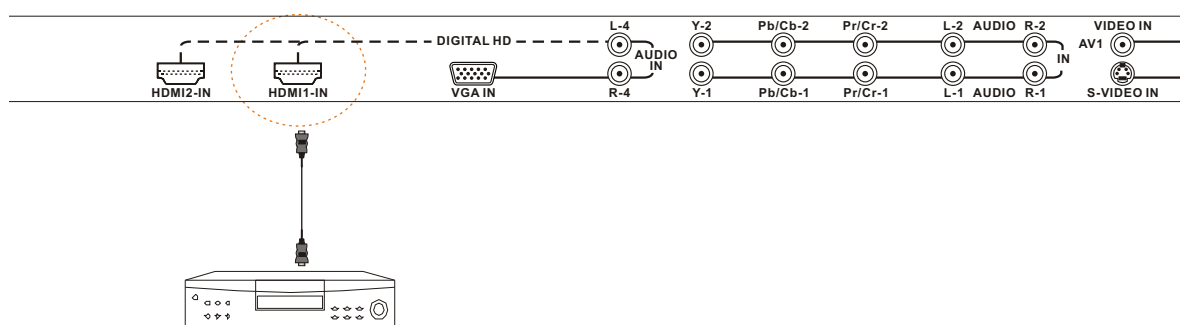

For DVD Players with DVI:

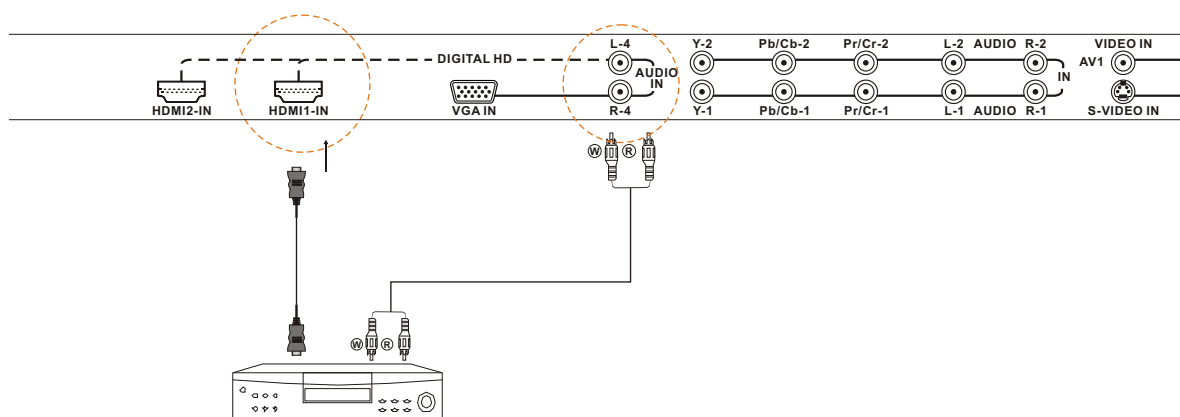


1. Turn off the power to the LCD TV and DVD player.
2. Using a HDMI-DVI cable, connect the DVI end to your DVD Player and the HDMI end to the HDMI input in the rear of your LCD TV.
3. Using an audio cable (white and red connectors), connect cable to the audio output connectors associated with the DVI output on the rear of your DVD Player, and connect the other end to the audio connectors associated with the HDMI input in the rear of your LCD TV.
4. Turn on the power to the LCD TV and your DVD Player.
5. Select HDMI1 using the **INPUT** button on the remote control or the front of the LCD TV, or directly by pressing the HD button on the remote control.

Note:

- a) If you are already using the HDMI1 input for another Digital HD, or you do not want to use the HDMI1 input for the DVD player, you can connect the DVD player to the HDMI2 connections.
- b) Refer to your DVD player user manual for more information about the video output requirements of the product.

2.2.2 - Using Component (Analog HD) Video

Connecting DVD Player(Better):

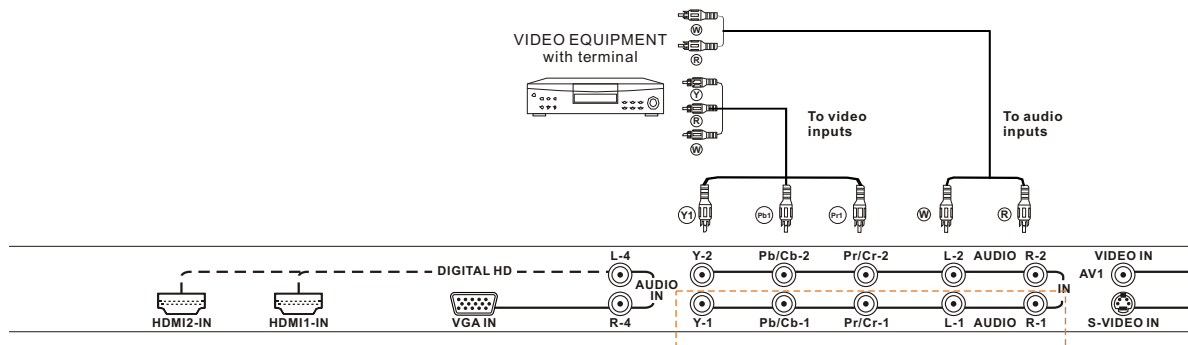


1. Turn off the power to the LCD TV and DVD player.
2. Connect the Y (green color) connector on the rear of your DVD player to the corresponding Y-1 (green color) connect or in the rear of your LCD TV.
3. Connect the Pb (blue color) connector on the rear of your DVD player to the corresponding Pb/Cb-1 (blue color) connector in the rear of your LCD TV.
4. Connect the Pr (red color) connector on the rear of your DVD player to the corresponding Pr/Cr-1 (red color) connector in rear of your LCD TV.
5. Connect the R (red color) and L (white color) audio connectors on the rear of your DVD player to the R-1 (red color) and L-1 (White color) audio input connectors in the rear of your LCD TV.
6. Turn on the power to the LCD TV and DVD player.
7. Select Component1 using the INPUT button on the remote control or front of the LCD TV or directly by pressing the HD button on the Remote Control.

Note:

- a) If you are already using the Component1 input for another component, or you do not want to use the Component Analog Component1 input for the DVD player, you can connect the DVD player to the Component2 connections.
- b) Refer to your DVD player user manual for more information about the video output requirements of the product.

2.2.3 - Using S-Video


Connecting DVD Player (Good):

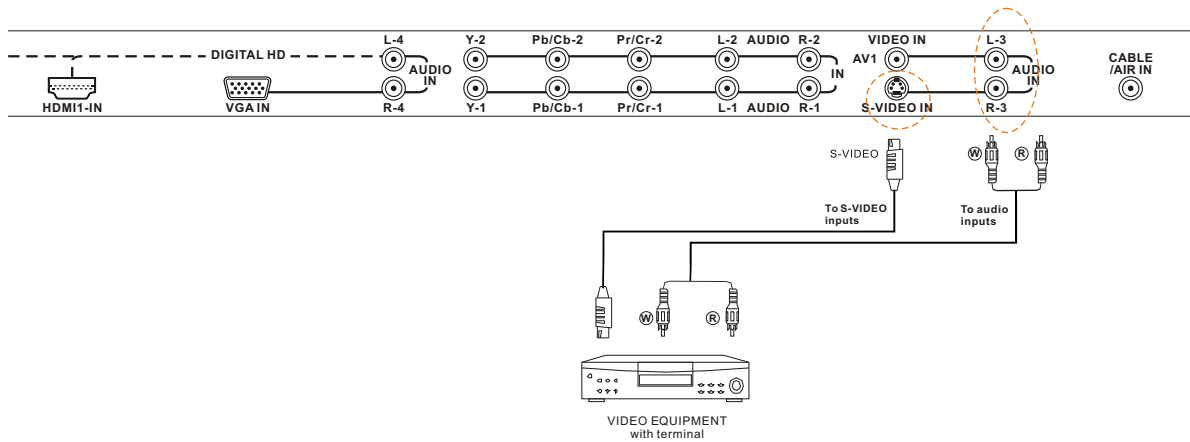

1. Turn off the power button of the LCD TV and the DVD player
2. Connect the S-Video jack on the rear of your DVD player to the S-Video jack in the rear of your LCD TV.
3. Connect the R (red color) and L (white color) audio connectors on the rear of your DVD player to the R-3 (red color) and L-3 (White color) audio input connectors in the rear of your LCD TV.
4. Turn on the power to the LCD TV and DVD player.
5. Select S-Video using the INPUT button on the remote control or front of the LCD TV or directly by pressing the AV button on the Remote Control.

Note: Refer to your DVD player user manual for more information about the video output requirements of the product.

Connecting DVD Player (Good):

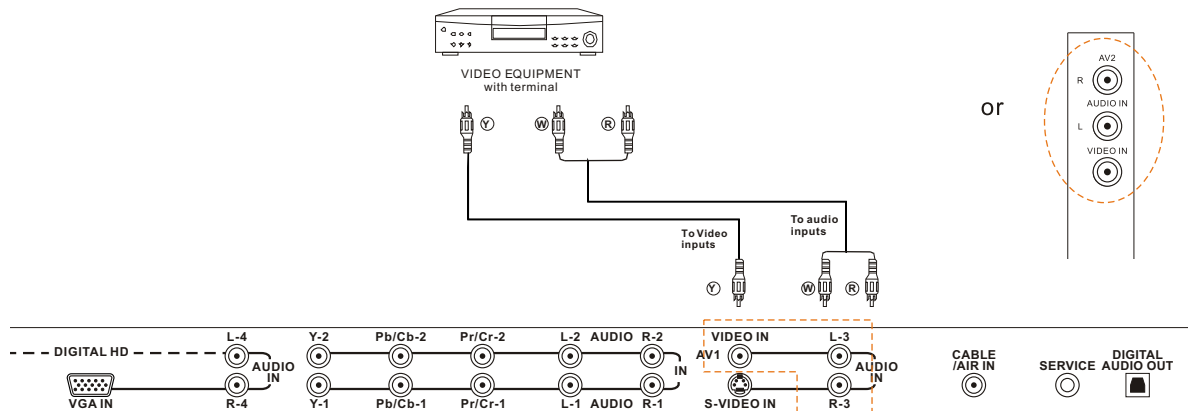

1. Turn off the power to the LCD TV and DVD player.
2. Connect the Video (yellow color) connector on the rear of your DVD player to the Video connector in the Composite (yellow color) in the rear of your LCD TV.
3. Connect the R (red color) and L (white color) audio connectors on the rear of your DVD player to the R-3 (red color) and L-3 (White color) audio input connectors in the rear of your LCD TV.
4. Turn on the power to the LCD TV and DVD player.
5. Select AV1 (Composite 1) using the INPUT button on the Remote Control or the front of your LCD TV, or directly by pressing the AV button on the Remote Control.

Note:

- a) If you are already using the AV1(Composite1) input for another Composite video, or you do not want to use the AV1(Composite1) input for the DVD player, you can connect the DVD player to the AV2(Composite2) connections.
- b) Refer to your DVD player user manual for more information about the video output requirements of the product.

2.3 - Connecting Your HDTV Set-Top Box


You have several options for connecting your HDTV Set-Top Box to your new 32" HDTV: HDMI (Digital HD) and VGA inputs. Based on your home theater configuration, you can decide which option is the right one for you.

2.3.1 - Using HDMI (Digital HD)

HDTV Set-Top Boxes that have a digital interface such as HDMI (High-Definition Multimedia Interface) should be connected to the HDMI input of the VISIONQUEST 32" HDTV for optimal results.

Note: To maintain the display quality, use a VISIONQUEST certified HDMI cable that is 10 meters or less. See WWW.VISIONQUESTCE.COM or call 1-877-851-2528 for details.

Connecting Set-Top Box (Best):

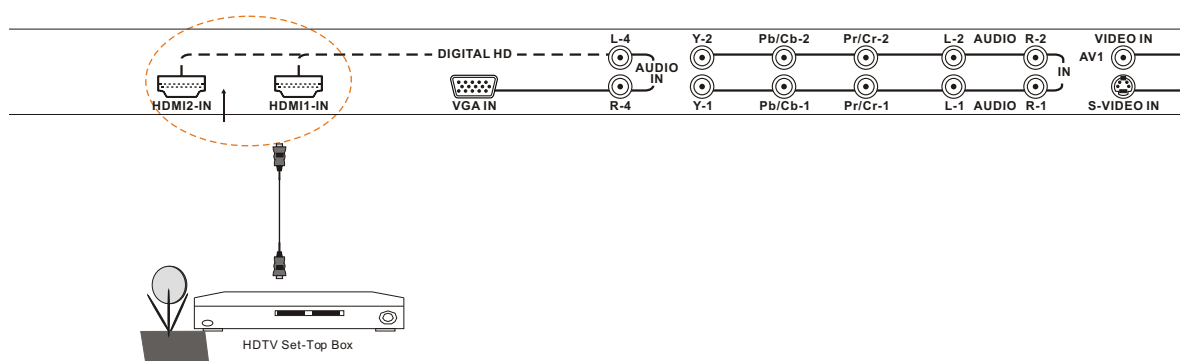


1. Turn off the power to the LCD TV and HDTV Set -Top Box.
2. Connect a HDMI cable to the HDMI output of your HDTV Set-Top Box and the other end to the HDMI input in the rear of your LCD TV.
3. Turn on the power to the LCD TV and your HDTV Set-Top Box.
4. Select HDMI1 or HDMI2 using the INPUT button on the front of the LCD TV or directly by pressing the HD button on the Remote Control.

Note:

- a) The HDMI input on your LCD TV supports High-bandwidth Digital Content Protection (HDCP). HDCP encrypts the transmission between the video source and the digital display for added security and protection.
- b) Refer to your HDTV Set-Top Box user manual for more information about the video output requirements of the product or consult your satellite or cable operator.


For HDTV Set- Top Boxes with DVI:

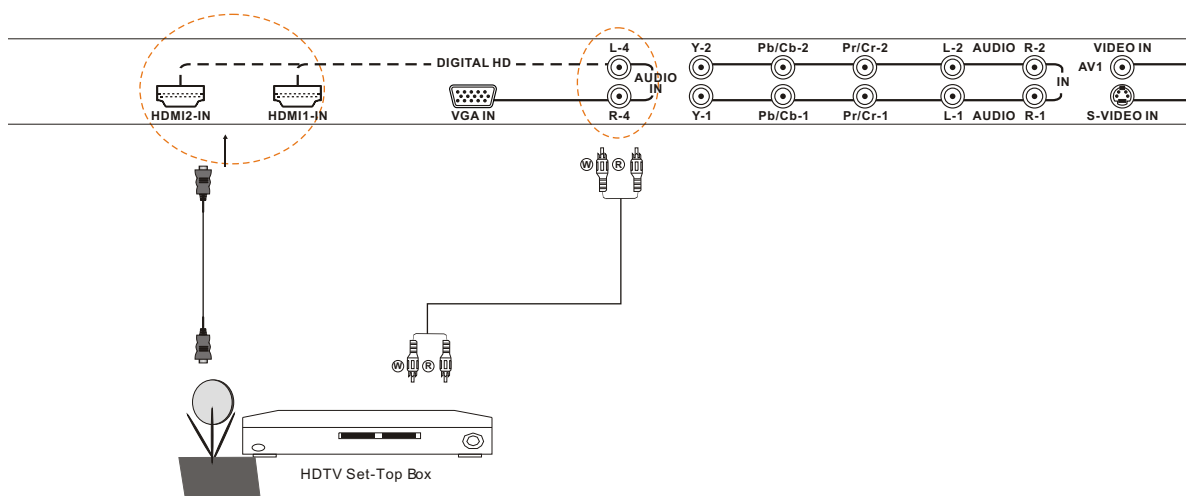

1. Turn off the power to the LCD TV and HDTV Set -Top Box.
2. Using a HDMI-DVI cable, connect the DVI end to your HDTV Set-Top Box and the HDMI end to the HDMI input in the rear of your LCD TV.
3. Using an audiocable (white and red connectors), connect cable to the audio output connectors associated with the DVI output on the rear of your HDTV Set-Top Box, and connect the other end to the audio connectors associated with the HDMI input in the rear of your LCD TV.
4. Turn on the power to the LCD TV and your HDTV Set-Top Box.
5. Select HDMI1 or HDMI2 using the INPUT button on the Remote control or front of the LCD TV or directly by pressing the HD button on the Remote Control.

2.3.2 - Using VGA Video


Connecting Set-Top Box (Better):

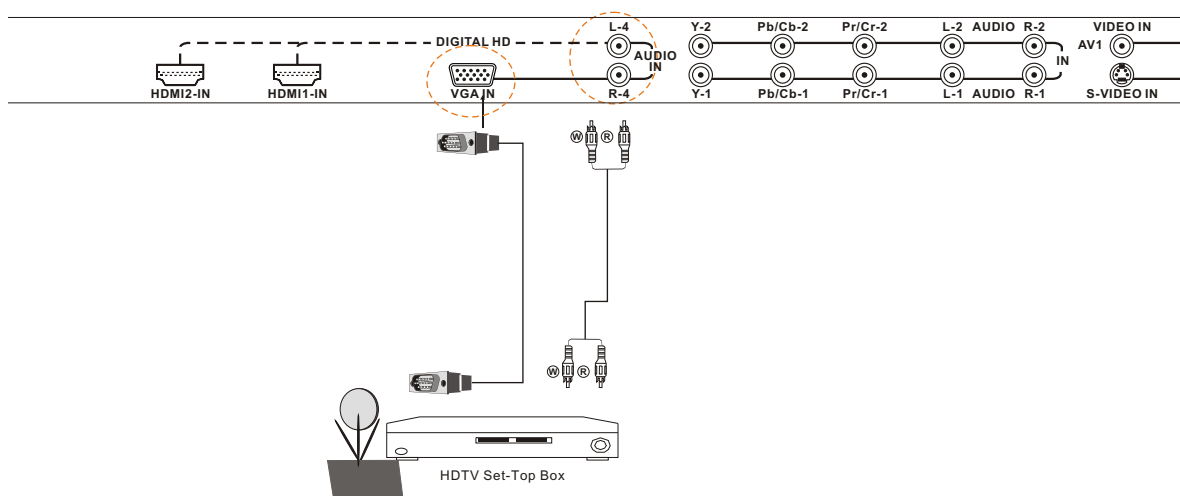

1. Turn off the power to the LCD TV and HDTV Set -Top Box.
2. Connect a 15-pin D-Sub VGA cable to the RGB output of your HDTV Set-Top Box and the other end to the VGA input in the rear of your LCD TV.
3. Connect the Audio Out on your HDTV Set-Top Box to the Audio within the VGA group in the rear of your LCD TV.
4. Turn on the power to the LCD TV and HDTV Set-Top Box.
5. Select VGA using the INPUT button on the Remote control or front of the LCD TV or directly by pressing the VGA button on the Remote Control.

Note: Refer to your HDTV Set-Top Box user manual for more information about the video output requirements of the product or consult your satellite or cable operator.

2.4 - Connecting Your VCR or Video Camera

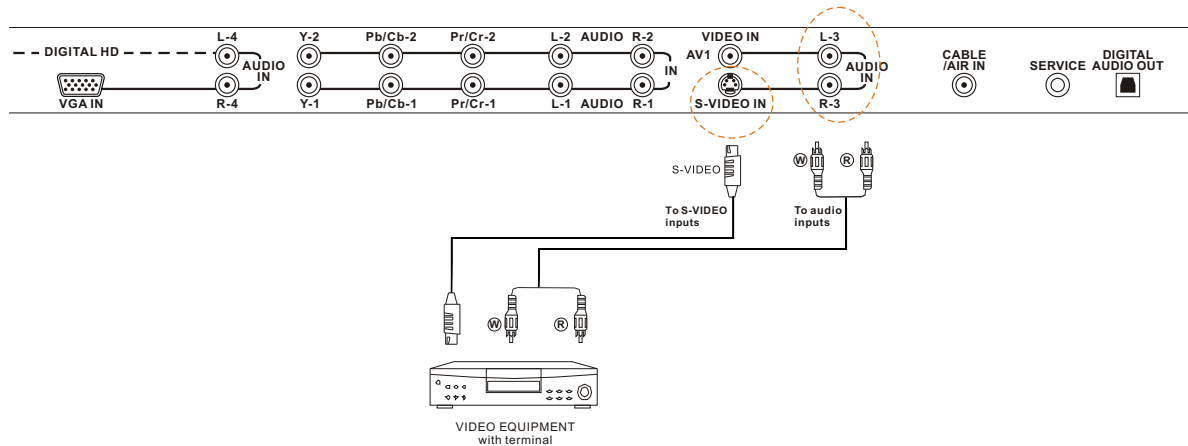

1. Turn off the power to the LCD TV and VCR or video camera.
2. Connect the S-Video jack on your VCR or video camera to the S-Video jack in the rear of your LCD TV.
3. Connect the R (red color) and L (white color) connectors on your VCR or video camera to the R-3 (red color) and L-3 (white color) audio input connectors in the rear of your LCD TV.
4. Turn on the power to the LCD TV and VCR or video camera.
5. Select S-Video using the INPUT button on the Remote control or front of the LCD TV or directly by pressing the AV button on the Remote Control.


Note: Refer to your VCR or Video Camera user manual for more information about the video output requirements of the product or consult your satellite or cable operator.

2.5 -Connecting Coaxial (RF)

There are several options for connecting your antenna(or cable for TV) to your new 32"HDTV-directly to the TV or through your VCR. Based on your home theater configuration, you can decide which option is the right one for you.

2.5.1-Using Your Antenna or Cable for TV

1. Turn off the power to your LCD TV.
2. Connect the coaxial (RF) connector from your Antenna or Cable to the AIR IN or CABLE IN connector in the rear of your LCD TV.
3. Turn on the power to your LCD TV.
4. Select TV using the INPUT button on the front of the LCD TV or directly by pressing the TV button on the Remote Control

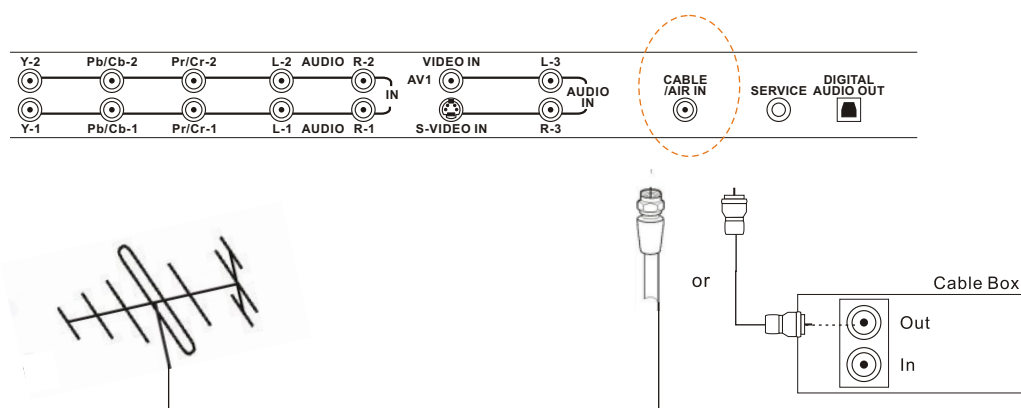


Note:

- a) Digital broadcasts are not available in all areas.
- b) Make sure the antenna is correctly grounded.
- c) For professional antenna installation, please contact VISIONQUEST Electronics at 1-877-851-2528 or visit our website at WWW.VISIONQUESTCE.COM.


2.5.2- Using the Antenna or Cable through Your VCR

1. Turn off the power to your LCD TV and VCR.
2. Connect the "Output to TV" (RF Out or Antenna Out) connector on the rear of your VCR to the TV CABLE/ AIR connector in the rear of your LCD TV.
3. Turn on the power to your LCD TV and VCR.
4. Select TV using the INPUT button on the remote control or front of your LCD TV or directly by pressing the TV button on the Remote Control.

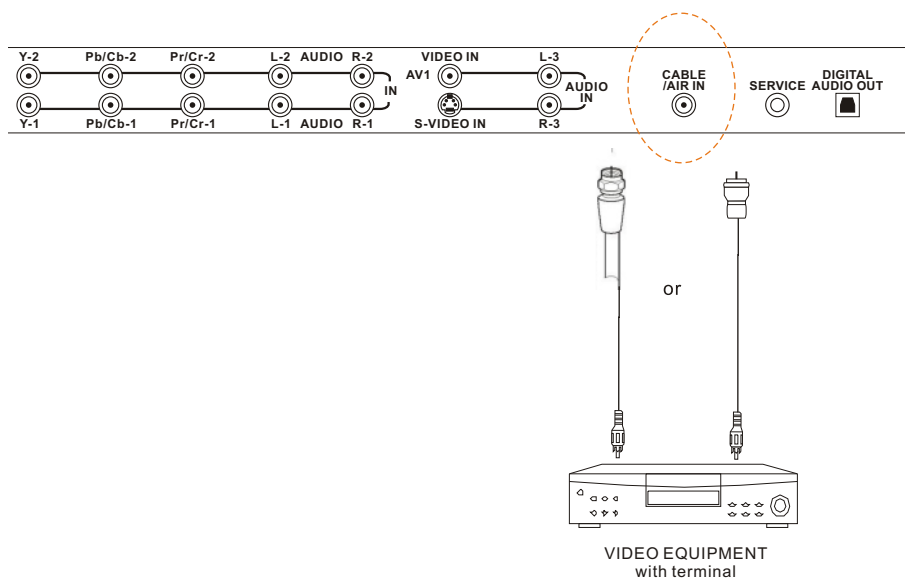

Note: If you have an off-air antenna or cable TV, connect the off-air antenna or TV cable to the RF connector on the rear of your VCR.


2.6-Connecting an Amplifier or Speakers

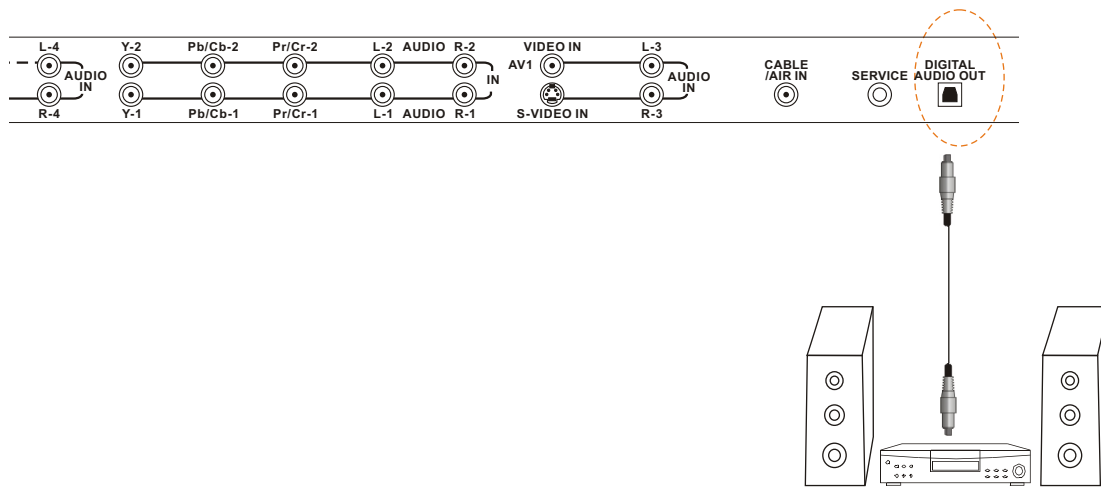

1. Turn off the power to the LCD TV and Receiver/AMP.
2. Connect the optic audio connectors on the Receiver/Amp to the optic audio output connectors in the rear of your LCD TV.
3. Turn on the power to the LCD TV and Receiver/AMP.
4. Refer to your Receiver/Amp system manual to select the corresponding audio input.

Note: This audio output is not amplified and cannot be connected directly to external speakers.

2.7 - Connecting a Computer

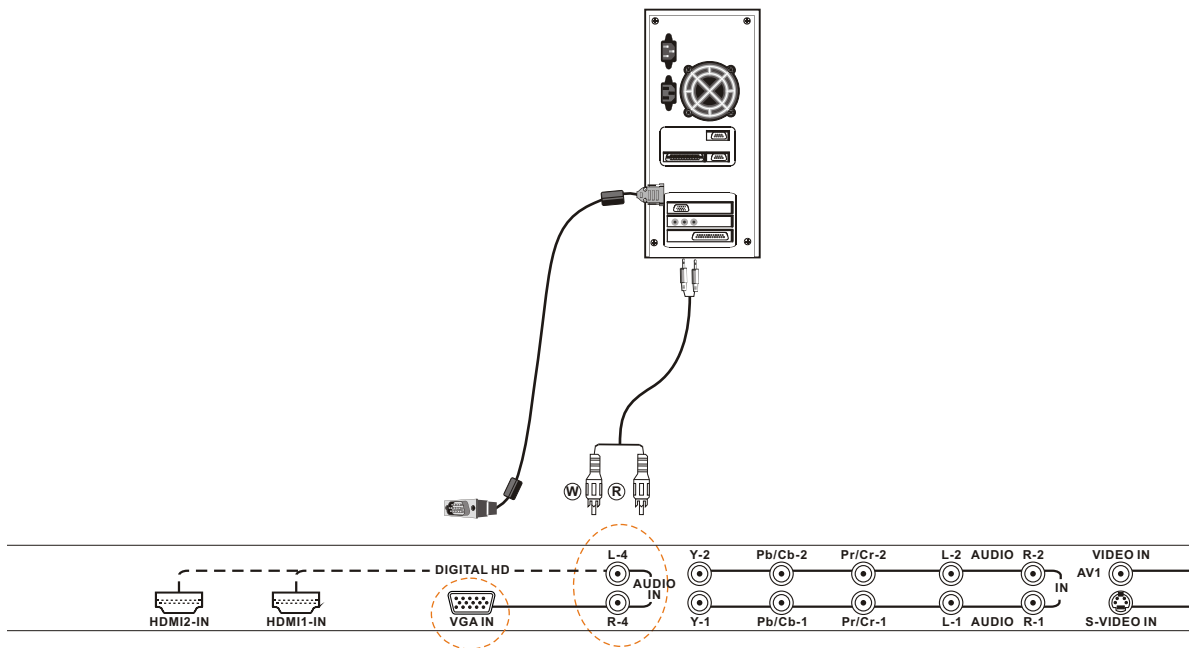

1. Turn off the power to the LCD TV and Computer.
2. Connect a 15-pin D-sub VGA cable to the VGA output of your computer and the other end to the VGA input in the rear of your LCD TV.
3. Connect the Audio Out on your computer to the VGA Audio IN in the rear of your LCD TV.
4. Turn on the power to your LCD TV and computer.
5. Select VGA using the INPUT button on the front of the LCD TV or directly by pressing the VGA button on the Remote Control.

Chapter 3- Setting Up to Watch TV

3.1 - Basic LCD TV Start Up

1.Connecting the Power Cable

Connect the power cord to the power cord connector on the back of your LCD TV, and then plug the power cord into an AC wall socket.

2.Connect Audio and Video Cables to the LCD TV

3.Turning Power On

Once all the components are connected, press the Power button on the front of the TV, or press the Power (Red) button on the remote control.

4.Select Input Source

Select the Input Source for your LCD TV by pressing the INPUT button on the front of the LCD TV or using the **INPUT** button on the remote control. Pressing this button will cycle you through the following options:TV,Composite1,Composite2, S-Video, Component1, Component2, VGA, HDMI1, HDMI2.

5.Using regular TV with an Air or Cable

If connecting to Antenna or cable source for the TV input, you will need to select the appropriate source within the On-Screen Display(OSD) menu and Channel Scan for the available TV channels.

Please follow the instructions below:

- Select the TV input by pressing the INPUT button on the front of the TV or using the INPUT button on the remote control, or directly by pressing the TV button on the remote control.
- Press the MENU button on the remote control to show the OSD menu.
- Press the ▼ button on the remote control to highlight the TV menu.

Note: If you do not see this option within the OSD, you might have selected the wrong input in the previous steps and you will need to repeat step 4(above) to select another Input Source.


d. Press ► button to highlight Tuner mode. Use the ◀ or ▶ button to select either Antenna or Cable.

e. Once selected, press the ▼ button once more to highlight Auto Scan to scan the available channels.

Use the ENTER button to start the Searching.

Note: This will take some time to complete.

f. Press the EXIT button to exit the OSD.

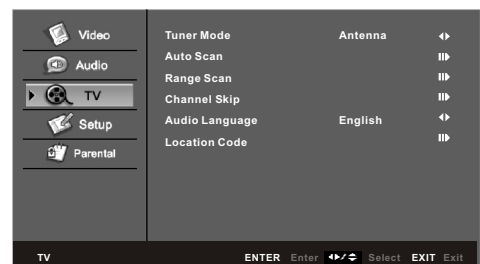

3.2 - Watching a TV Program

Before you start watching TV, please make sure that any cable, satellite, or off-air antenna connections are secure. Also, verify that the power cord is plugged into a correctly grounded electrical outlet or surge protector.

1. Press the power button on the remote control or on the front of your LCD TV.
2. There are 4 options for selecting your programming:
 - a. If you are using Air or Cable connected through the TV input, you can select TV using the INPUT button on the front of your LCD TV.
 - b. If you are using a cable set-top box, satellite dish, or off-air antenna connected through the TV (Cable/ Antenna) input, you can select TV using the INPUT button on the front of your LCD TV.
 - c. If you are watching broadcasts through a cable set-top box or satellite dish connected by HDMI, select HDMI using the INPUT button on the front of your TV.
 - d. If you are watching a cable set-top box or satellite dish connected through the component inputs (YPbPr), select Component1 or Component2 using the INPUT button on the front of your LCD TV.

Note: You should be able to see a picture. If you do not, make sure that all connections are secure and you have selected the correct video input source.

3. Press the CH+/- buttons on the remote control or the CH+/- buttons on the front of your LCD TV to change the channel.

3.3 - Adjusting Basic LCD TV Settings

Volume

To increase the volume, press and hold the VOL+ button on the front panel or remote control until the desired level is reached.

To decrease the volume, press and hold the VOL- button on the front panel or remote control until the desired level is reached.

TV Channels

To step up through the available TV channels, press the CH+ button on the front panel or remote control once for the next channel or hold it depressed until the desired channel is reached.

To step down through the available TV channels, press the CH- button on the front panel or remote control once for the previous channel or hold it depressed until the desired channel is reached.

3.4-Using the On-Screen Display(OSD)

The remote control or the bottom control keys on the front panel of the TV can control all the function settings. The on-screen display(OSD) allows you to adjust and save contrast, brightness and other settings. The TV will save changes made to the settings, even if the TV is turned off.


3.4.1-OSD Menu Operations

The OSD consists of several menu options: Video, Audio, TV, Setup, Parental. The main menu options may vary depending on your selected input source.

Note: Some of the main menu options may have additional submenus, i.e. H-Position in the Video for VGA.


Video- Adjust the video related setting.

Video page provides Picture Mode, Brightness, Contrast, Saturation, HUE, Sharpness, Back Light, Color Temperature, Advanced Video and VGA settings.

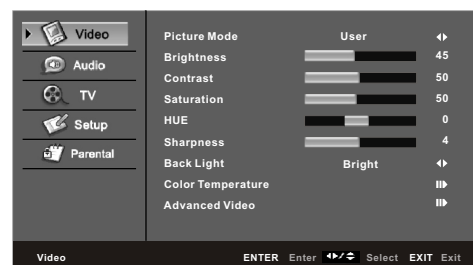


Audio- Adjust the audio related settings.

Audio page provides Balance, Bass, Treble, Sound Surround, Reverb, Equalizer, Speaker, SPDIF Type and Audio Volume Control settings.

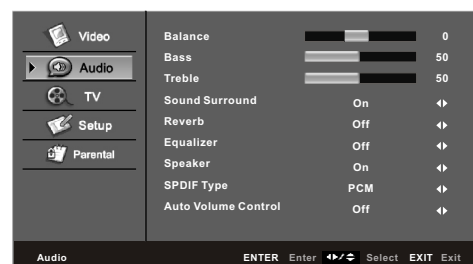


TV- Adjust the channel related settings.
Adjust the audio language related settings.

TV page provides Tuner Mode, Auto Scan, Range Scan, Channel Skip, Audio Language, Location Code settings.

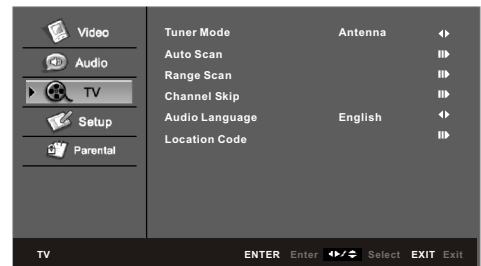


Setup- Adjust the general settings.
Adjust the caption settings.

Setup page provides OSD Language, Screen Mode, Blue Mute, DPMS, Time Setup, Caption, Reset Default settings.

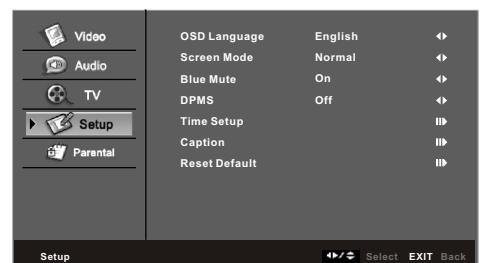

Parental- Adjust the parental related settings.

Parental page provides Channel Block, Program Block, Input Block, Change Password and Clean All functions.

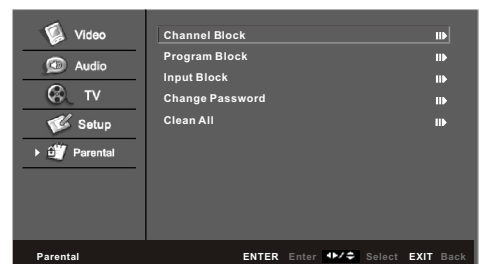

3.4.2-Video

Available for the following input sources-Composite1,Composit2, S-Video, Component1, Component2, HDMI1,HDMI2, TV.

- 1.Press the MENU button to display the menu.
- 2.Press the▲or▼button to select the Video item
- 3.Press the ENTER or▶button too display the sub.menu.
- 4.Press the▲or▼button to select the Sub item
- 5.Press the ◀or▶button to adjust the settings.
- 6.Pess EXIT button to exit the current page, or press the Menu button to exit the OSD.

Picture Mode-To quick adjust video settings by the default selections: Normal, User, Cinema, Sport, Vivid and Hi-Bright.

Brightness-Adjusts the black levels of the picture, users may need to readjust the brightness after the TV warms up.


Contrast-Adjusts the level of white between the lightest and darkest portions of an image, If the contrast is too low, the picture appears dark and lacks detail. If the contrast is too high, the picture appears faded and lacks shadow and depth.

Saturation- Adjusts the levels of white and color in the picture. Highly saturated colors then to be deep and strong while unsaturated colors are weaker and lighter.


Hue-Adjusts to make the flesh tones more natural.

Sharpness-Adjusts the clarity of the picture. If the sharpness is set too high, hard edges in the picture appear to have a ghost image.

Back Light- To adjust the back light to brighten or darken: dark. middle, bright.

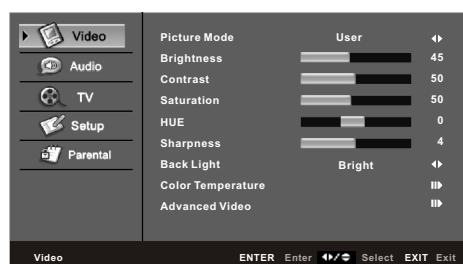

Color Temperature-Option include user, cool, standard or warm.

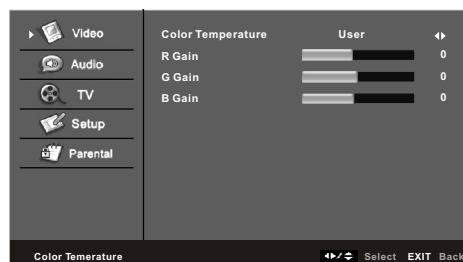

Advanced Video- Press the enter button, "Advanced Video" window appears.

DNR- Option include off/low/medium/strong/auto, select "on" to control the sharpness and noise reduction automatically.
DNR: Digital Noise Reduction.


Black Level Extender- To adjust the ability in the black areas detail of the picture :On and Off.

White Peak Limiter- To adjust the ability in the white areas detail of the picture : On and Off.

CTI- Option include low/medium/strong/off.

Flash Tone-Select "on" to correct the flash tone automatically.

Adaptive luma control- user selects either on or off.

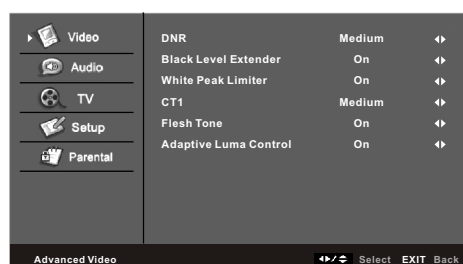

VGA- Active when input source is VGA.



Auto Adjust- To auto adjust the VGA timing automatically.

H.Position- To adjust the horizontal position.

V.Position- To adjust the vertical position.


Phase- To adjust the phase.

Clock- To adjust the clock.

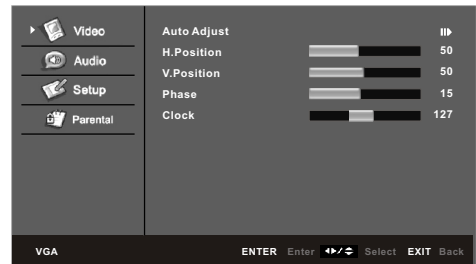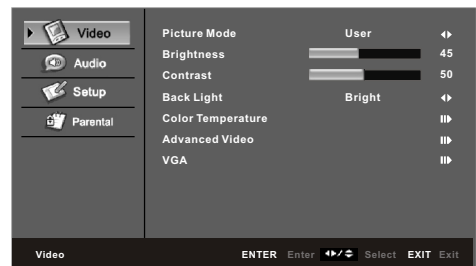

3.4-3-Audio

1. Press the MENU button to display the menu.
2. Press the ▲ or ▼ button to select the Audio item.
3. Press the ENTER or ► button too display the sub.menu.
4. Press the ▲ or ▼ button to select the Sub item.
5. Press the ◀ or ▶ button to adjust the settings.
6. Press EXIT button to exit the current page, or press the Menu button to exit the OSD.

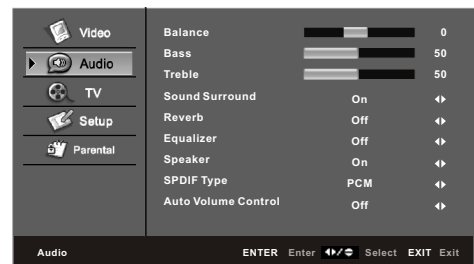

Balance- Adjust the balance level between the channels.

Bass- Adjusts the bass.

Treble- Adjusts the treble.

Sound Surround- User selects either on or off.

Reverb- To adjust the audio enhancement: Off, Concert, Living Room, Hall, Bathroom, Cave, Arena and Church.

Equalizer- To adjust the equalizer: OFF, Rock, Pop, Live, Dance, Techno, Classic and Soft.

Speaker- To adjust the TV speakers: On and Off.

SPDIF Type- To adjust the SPDIF output : PCM, Off and Dolby Digital.

Auto Volume Control- To adjust the Auto Volume Control: On and Off.



3.4.4-TV

1. Press the MENU button to display the menu.
2. Press the ▲ or ▼ button to select the TV item
3. Press the ENTER or ► button to display the sub.menu.
4. Press the ▲ or ▼ button to select the Sub item
5. Press the ◀ or ▶ button to adjust the settings.
6. Press RED and GREEN button to Page UP and Page Down
7. Press EXIT button to exit the current page, or press the Menu button to exit the OSD.

Available for the following input sources-TV

Tuner Mode-Sets the source for the tuner. Options include Antenna or Cable, Antenna sets the tuner for an antenna and Cable sets the tuner for cable or a satellite dish.

Auto Scan- Automatically scans for all of the TV channels available and stores the information in memory.

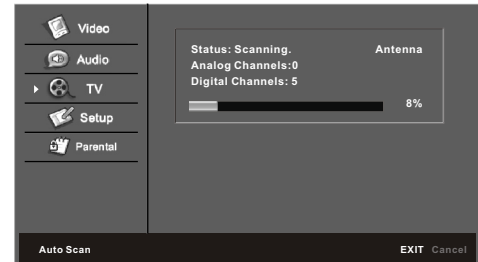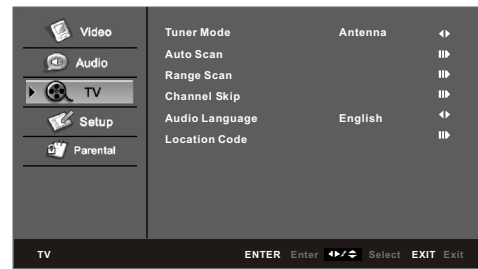


Range Scan- To execute certain range frequency scan by the tuner mode. Range scan provides to scan analog or digital signal only or both analog and digital signal.

Press the ◀ or ▶ button to select the scan mode.

Press the ▲ or ▼ button to select From channel or To channel and then press the ◀ or ▶ button or enter the number buttons directly to edit the channel frequency.

Press ENTER button to start to scan.

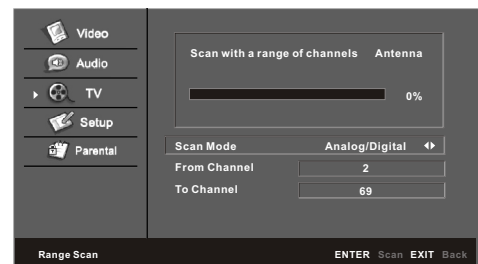

Channel Skip-Skips the set channel from the channel list.

Press the DOWN arrow button ▼ again to highlight CHANNEL SKIP. Press the ENTER button.

The list of channels available and stored in memory is shown on the screen. If the list is longer than 9 channels, you will be able to scroll through the channel by pressing red button, blue button and ▲ ▼ button repeatedly. The boxes to the right of the channel names are empty by default.

As you scroll down the channels with the DOWN arrow ▼, each one is highlighted in turn. When a channel you want to skip is highlighted, press the Enter button and a check mark (✓) will appear in the box opposite that channel. This means that when surfing with the CH+ or CH- buttons, this channel will be skipped and not displayed. press MENU to navigate away from this screen when finished.

Audio Language- To adjust the default audio language in a digital program: English, Spanish and French.

Location Code- To set the State Code and Country Code.



3.4.5-Setup

1. Press the MENU button to display the menu.
2. Press the ▲ or ▼ button to select the Setup item
3. Press the ENTER or ► button too display the sub.menu.
4. Press the ▲ or ▼ button to select the Sub item
5. Press the ◀ or ▶ button to adjust the settings.
6. Press EXIT button to exit the current page, or press the Menu button to exit the OSD.

OSD Language- Changes the language of the On-Screen Display (OSD) menu. Options include French, Spanish or English.

Screen Mode- To adjust the screen mode.

Screen mode selection items will be different based on the aspect ratio.

4:3- Auto, Normal, Letterbox, Zoom, Panorama and Dot by Dot.

16:9- Auto, Normal, Zoom, Dot by Dot.

Blue Mute- To adjust the blue mute: On and Off.

DPMS- To adjust the DPMS value: On and Off.

Time Setup

Time Zone- To adjust the setup the : Eastern Time, Indiana, Central time, Mountain time, Arizona, Pacific time, Alaska and Hawaii.

Time - To adjust the auto synchronization and timer settings:
Auto Synchronization-Change the auto synchronization value: On and Off.

Timer -Change the Timer value: On and Off.

Sleep Timer- Sleep timer is used to turn off the TV automatically based on the settings no matter panel or remote control buttons are been pressed or not: 10min/20min/30min/40min/50min/60min/90min/120min.

Auto Sleep- To adjust the auto sleep time to turn off the TV automatically after stopping pressing the panel or remote control buttons: Off, 1 Hour, 2 Hours and 5 Hours.

Auto Sleep timer is to turn off the TV based on the settings after stop pressing the panel or remote control buttons.

Caption- Allows you to read the voice content of television programs. Press the DOWN arrow ▼ once to highlight the ANALOG CLOSED CAPTION option.

Use the ◀ and ▶ arrow buttons to select the Analog Closed Caption: OFF, CC1, CC2, CC3, CC4, TEXT1, TEXT2, TEXT3 and TEXT4.

CC1, CC2, CC3, CC4- To display a printed version of the dialog and sound effects.

TEXT1, TEXT2- To display station information presented using either half or the whole screen.






TEXT3, TEXT4- To display extended data service.

press the arrow ▼ to highlight Digital Closed Caption.

Use the ◀ and ▶ arrow buttons to select the Digital Closed Caption: OFF, SERVICE1, SERVICE2, SERVICE3, SERVICE4, SERVICE5, SERVICE6.

press the arrow ▼ to highlight DIGITAL CAPTION STYLE. Press Enter. The Custom page allows you change the front size color, the background color, and the transparency of the closed caption. Press MENU to navigate away from this screen when finished.


Reset Default- To reset menu settings except the parental values to the default values.

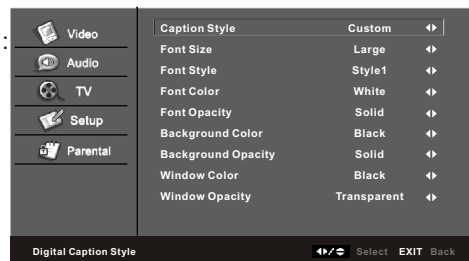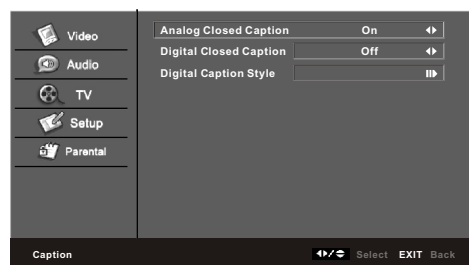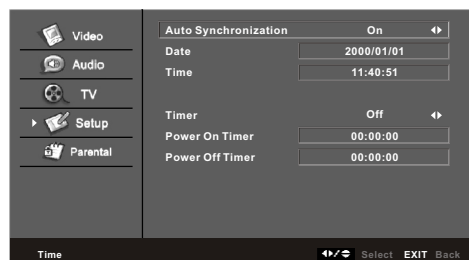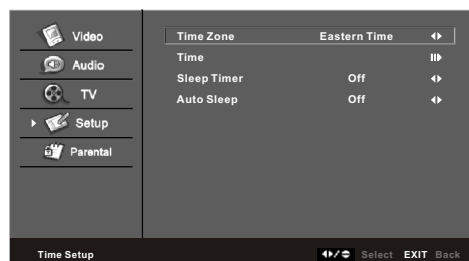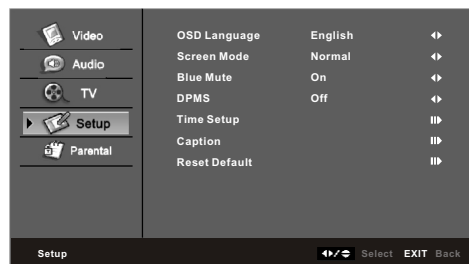


3.4.6-Parental

Parental page provides Parental page provides Channel Block, Program Block, Input Block, Change Password and Clean All functions setting.

Press Menu button to display the menu.
Press the ▲ or ▼ button to select the parental item and then press the ENTER or ► button to display the sub.menu
Enter the password, the factory default password is 0000, then the sub item will appear.

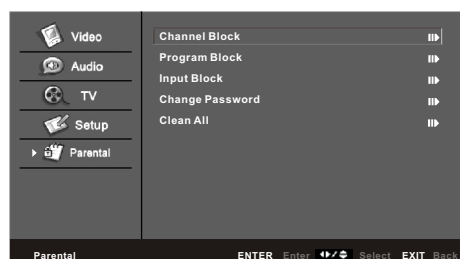

Channel Block- To lock a channel by channel number. Press ENTER. The list of channels available and stored in memory is shown on the screen. If the list is longer than 9 channels you will be able to scroll through the channel by pressing red button, blue button and ▲ ▼ button repeatedly. The boxes to the right of the channel names are empty by default. As you scroll down the channels with the DOWN arrow ▼, each one is highlighted in turn. When a channel you want to block is highlighted, press the ENTER button and a check mark (☑) will appear in the box, This means that when this channel is selected a password request bar will appear on the screen and you will not be able to view the channel without first entering the correct password, Press EXIT to navigate away from this screen when finished.

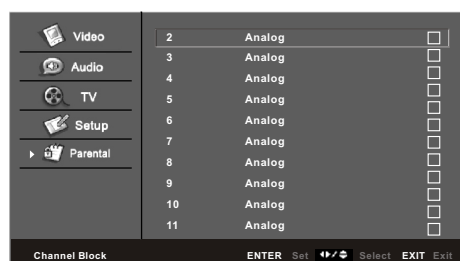

Program Block- To lock a program by rating.

Rating Enable-To adjust the rating enable selection: On and Off.

U.S. TV Ratings-To adjust the U.S. TV Ratings.

Age-Based Options

Y(all children)

Y7(older children)

G(general audience)

PG(guidance suggested)

14(strongly cautioned)

MA(mature audience)

Content-Based Options

FV(fantasy violence)

D(sexual dialog)

L(adult language)

S(sexual situations)

V(violence)

U.S. Movie Ratings-To adjust the U.S. Movie Ratings.

G(general audience)

PG(parental guidance suggested)

PG-13(recommended for children 13 years of age or older)

R(mature audience)

NC-17(no one 17 and under allowed)

X(adult only)



Open V-Chip- To adjust individual programs based on the broadcasted regional rating.

Block Unrated- To adjust the block unrated setting: Off and On.

A blocked rating can be un-locked temporarily after key-in the correct password.


The locked rating is temporarily un-lock, After powering off the TV, the un-locked rating will be locked again.

Input Block- To lock an input source.

Note:

a) Please make sure to write down and store the new password in a secure place.

b) The TV Parental Control password will always be the same as this one.

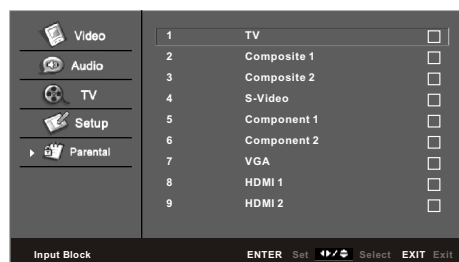


Change Password- To change the password.


Clean All- To reset all menu settings to the default values.





3.4.7-Channel Information

When a channel is selected, an information header is shown over the picture for a few seconds. This information consists of the channel number and name, the format in which the program is broadcast (480i SD, 480P SD, 720P HD, 1080i HD), audio channel 1/2 or 2/2 (omitted if alternate channel is not broadcast), language, program title, program start and end time, program rating and if CC is available.


Program Title() - The program title of the current program.


Program Time() - The program time of the current program.


Rating() - The rating of the current input source program.


Lock() - The current channel, program or input is a blocked one.

Favorite CH() - The current channel is a favorite one.


CC Icon() - The current program has closed caption.

CC Description() - The playing closed caption description of the current program.



Channel Number() - The channel number of the current channel.

Channel Name() - The channel short name of the current channel.


Tuner Mode() - The current tuner source.

Audio Language() - The audio language of the current digital program.


Video Format() - The video format of the current program.

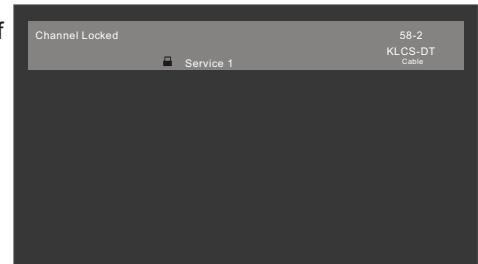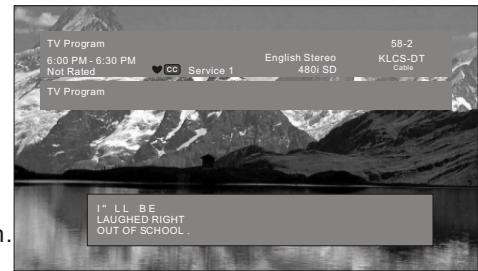


When you press the INFO button on the remote control, you not only get the information header display, but also a short summary of the program content when available from the broadcast. If you do nothing else with the INFO button, these panels will remain on the screen, even when changing channels.

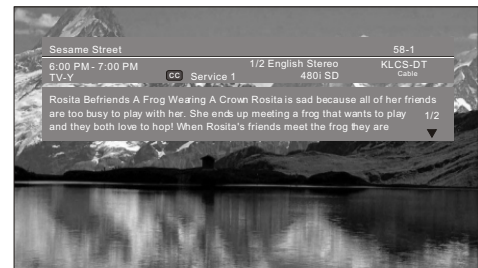

Press the INFO button and the program summary will disappear, but the information header will remain.

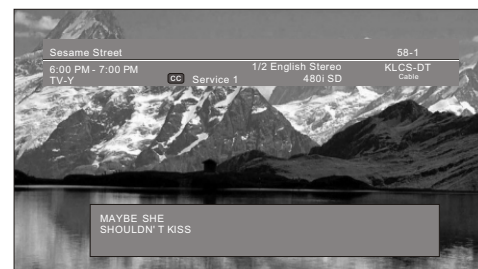


Press the INFO button again and only the channel number and name will remain. Press the INFO button one more time and this will disappear.

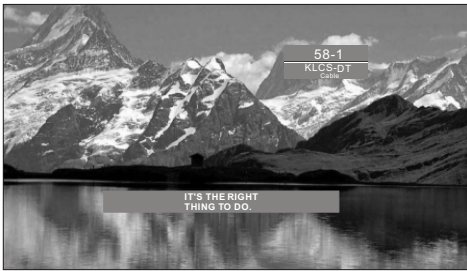

3.4.8 Program Information

Press the GUIDE button on the remote control and program information for the channel you are watching will be displayed on the screen with the live program content in a small window in the lower left corner of the panel.

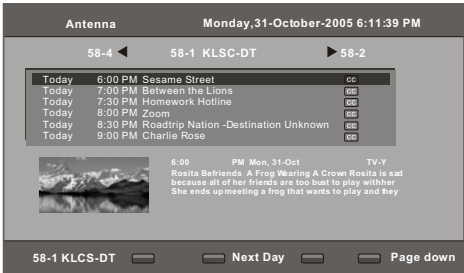

Press the ◀ or ▶ arrow button to scroll up or down the channels. Each time you pause at a channel, the program list will update with the program schedule for that channel and the window will show the live program for that channel. Press the GUIDE button to EXIT this feature.

3.4.9-Picture-in-Picture(PIP)/Picture-by-Picture(POP) Mode

You can watch two pictures at the same time. by pressing the PIP button on your Remote Control, When PIP is turned on, One picture is displayed as the full screen (main screen) and the other picture is displayed in a small window(sub screen). The sub-screen can be set to small, medium or large.

See below for detailed information regarding the PIP sources.

MAIN \ PIP	TV	Composite1	Composite2	S-Video	Component1	Component2	HDMI1	HDMI2	VGA
TV					✓	✓	✓	✓	✓
Composite1					✓	✓	✓	✓	✓
Composite2					✓	✓	✓	✓	✓
S-Video					✓	✓	✓	✓	✓
Component1	✓	✓	✓	✓			✓	✓	
Component2	✓	✓	✓	✓			✓	✓	
HDMI1	✓	✓	✓	✓	✓	✓			✓
HDMI2	✓	✓	✓	✓	✓	✓			✓
VGA	✓	✓	✓	✓			✓	✓	

" ✓ "-Indicates which inputs are available for PIP and POP modes.

3.4.10-Adjusting Basic PIP/POP Settings

Swapping PIP/POP Video

You can swap the program that is in the main picture with the program in the PIP sub-picture. To swap the main picture with the PIP sub-picture program, press SWAP on the remote control. If you press SWAP again, it will return the program to the main picture. This works the same if you are in the Picture by Picture(POP) mode.

Swapping PIP/POP Audio

You can also swap the audio between main picture and PIP sub-picture by pressing the ◀▶ button on your remote control. For example, if you are listening to the audio for the Main Screen and want to hear the audio from the Sub Screen you press the ▶ button; press the ◀ button to switch back. This works the same if you are in the Picture by Picture (POP)mode.

Chapter 4- Maintenance and Troubleshooting

4.1-Maintenance

Important

1. Make sure that the power cable is removed from the socket before cleaning the display.
2. Do not use volatile solvent (such as toluene, rosin and alcohol) to clean the display. Such chemicals may damage the housing, screen glass and remote control, and cause the paint to peel.

Cleaning the Housing and the Remote Control

1. Use a soft cotton cloth for cleaning.
2. If the housing or remote control is seriously contaminated, use a soft cloth moistened with diluted neutral cleaner to clean the display. Remove water out of the cloth before cleaning to prevent water from penetrating into the housing. Wipe the display with a dry cloth after cleaning.

Cleaning the Screen

1. Use a soft cotton cloth to gently clean the screen.
2. The screen glass is very fragile. Do not scrape it with any sharp object. Do not press or tap the screen to avoid cracking. When the screen is seriously contaminated, use a soft cloth moistened with diluted neutral cleaner to clean display. Remove water out of the cloth before cleaning to prevent water from penetrating into the housing. Wipe the display with a dry cloth after cleaning.

4.2-Troubleshooting Guide

If the display fails or the performance changes dramatically, check the display in accordance with the following instructions. Remember to check the peripherals to pinpoint the source of the failure. If the display still fails to perform as expected, contact the dealer for assistance.

Problem	Solution
The TV cannot be turn ON.	Check if the AC adapter is securely connected by plug it in to the TV and plug it in to the wall socket. Switch on the TV, the LED light on the front panel will turn blue; and then press power on the remote control, the LED light will be off, now you can see the picture on the screen. Plug another electrical device (like a radio) to the power outlet to verify that the outlet is supplying the proper voltage.
There is no sound on the TV.	Check your audio connection. Press MUTE on the remote control again, so that MUTE disappears from the screen. Check your audio settings, your TV audio may be set to SAP or minimum. Press the VOL+(Up) key on your remote control. Check to see if your speakers are turned on or off.
If the screen is blue.	Check your input connections.
Blank screen appear when the power is on.	Make sure the video cable supplied with the LCD display is tightly secured to the video output port on the back of the computer. If the other end of the video cable is not attached permanently to the LCD display, tightly secure it to the LCD display. Adjust brightness and contrast. If you are using a Macintosh older than G3, you will need a Macintosh adapter. Check Source settings.
Wrong or abnormal colors appear.	If any colors (red, green, or blue) are missing, check the video cable to make sure it is securely connected. Loose or broken pins in the cable connector could cause an improper connection. Connect the LCD display to another computer.
Control buttons do not work.	Press only one button at a time.
Remote Control does not work.	Make sure batteries are inserted correctly. Batteries could be weak.
There appears to be image quality issues.	TV: For best image quality, "Standard Definition" TV should be viewed as 4:3
You cannot see a picture.	Make sure that the power cord is plugged into a grounded electrical outlet. Make sure that the power button is turned on. Make sure that the selected input source is connected to a working input source.
You see a distorted picture or hear unusual sound.	You may be getting interference from electrical appliances, cars, motorcycles, or fluorescent lights. Try moving your LCD TV to another location.
The picture has abnormal patterns.	Make sure that the input source cable is attached securely and correctly to the back of your LCD TV. Make sure that the video input source is within the range of your LCD TV. Compare the video input source's specifications with your LCD TV specifications.
The display image does not cover the entire screen.	If you are using VGA mode, make sure that H Size and V Position in the OSD are set correctly. If you are using TV, AV, S-Video or component (Analog HD) with 480i input, use the SCREEN button on the remote control to scroll through various screen modes.
You can see a picture but you cannot hear sound.	Make sure that the volume is not turned down. Make sure that the sound is not muted. Make sure that your audio input source cables are connected securely and correctly
The LCD TV has pixels that are always bright, dark, or colored.	Your LCD TV is manufactured using an extremely high level of precision technology. However, sometimes some pixels of your LCD TV may not display. Pixel defects within industry specifications are inherent to this type of product and do not constitute a defective product.

Problem	Solution
You see "noise" or "trash" on the screen.	When you LCD TV's digital capabilities exceed a digital broadcast signal, the signal is up-converted (increased) to match your LCD TV's display capabilities. Up-converting can cause noise or trash.
You switch to a different input and the screen size changes.	The LCD TV remembers the viewing mode from the last time you used a particular input (AV, S-Video, Analog HD, Digital HD, VGA and TV).

Tips for High-Definition Users	The LCD TV is an ideal platform for viewing High Definition Content. Best Image Quality will be achieved by the HDMI Input, then YPbPr, then VGA. However, due to variances in broadcast practices, it is possible some image distortions can occur.
Tips for Letterbox Content Users	Letterboxed (or "Wide Screen") versions of DVD movies are most commonly formatted for standard 4:3 Television. The LCD TV has the capability of expanding this content so the entire screen is filled at the expense of image accuracy. To use this function, press the "ZOOM" key on the remote control and cycle among the available options.

4.3-Telephone & Technical Support

Products are often returned due to a technical problem, rather than a defective product that may result in unnecessary shipping charges billed to you. Our trained support personnel can often resolve the problem over the phone. For more information on warranty service or repair, after the warranty period, please contact our Support Department at the number below.

Quality service and consistent technical support are integral parts of VISIONQUEST's commitment to service excellence. VISIONQUEST's service representatives are dedicated to assist you with the utmost in customer satisfaction. To better assist you, please call or contact us via email.

Call us for technical support

Monday to Friday 9:00 am to 5:30 pm Pacific Time

Tel : 1-877-851-2528

Web: WWW.VISIONQUESTCE.COM

VISIONQUEST SERVICE CENTER
4906 BLEECKER STREET
Baldwin Park, CA 91706

4.4-Compliance

Caution: Always use a power cable that is properly grounded. Please use the AC cords listed below for each area.

USA	UL
Canada	CSA
Germany	VDE
Britain	BASE/BS
Japan	Electric Appliance Control Act

4.5-FCC Class B Radio Frequency Interference Statement

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.

Notice:

1. The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
2. Shielded interface cables and AC power cord, if any, must be used in order to comply with the emission limits.
3. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modification to this equipment. It is the responsibilities of the user to correct such interference.

Specifications

Specifications	
Panel	32"Diagonal, Color TFT Active MatrixLCD
Resolution	1366X768pixels (WXGA format)
Colors	16.77 million colors
Display Compatibility	HDTV (720p) Native, 1080i,1080P
Signal Compatibility	480i (SDTV), 480p(DVD/EDTV),720p(HDTV),1080i(HDTV), 1080P
Response Time	8ms(typical)
Brightness	600cd/m2 (typical)
Contrast	1200:1(typical)
Viewing Angle	178°(horizontal),178°(vertical)
Inputs	1xRF, 2xHDMI1.1(HDCP 1.1)), 2xComponent(ANALOG HD1,ANALOG HD2), 2xComposite (AV),1xS-Video,1xComputer(VGA), 5xStereo Audio in (RCA),1xService
Output	1digital audio optical output
Features	PIP,POP,Noise Reduction, 3:2 Pull Down, 3D Comb Filter, Progressive Scan, Aspect Ratio conversion,3D Deinterlacer, Gamma Correction Stereo, MTS and SAP, Closed Caption, V-Chip (Parental Control)
Speakers	stereo 15 W/channel integrated speakers
Lamp Life	60,000 hours
Power	
Input	IEC Connector for direct power line connection
Voltage Range	110-240 VAC 50-60Hz
Power Consumption	200 W
Environment Conditions	
Operating	Temperature:5~35°C, Relative Humidity:10-90%, Altitude:0~14,000ft
Non-Operating	Temperature:-20~50°C, Relative Humidity:10-90%, Altitude:0~40,000ft.
TV Dimensions	32.0"(W)x4.2"(D)x 22.1(H) w/o stand 32.0"(W)x9.7"(D)x 24.4(H) w/ stand
TV Net Weight	35.2lb w/stand, 30.8lb w/o stand
TV Carton Dimensions	36.1"(L)x28.3"(D)x11.6"(H)
TV Carton Weight	45.1lb
Certifications	UL,C-UL,FCC Class B

PC compatibility chart

To reduce the need for adjustment for different modes, the TV has default setting modes that are most commonly used. These are shown in the table below. For optimum adjustment, the user is suggested to perform the Auto Setup in Windows "Full Screen" pattern

RESOLUTION	V.FREQ.(Hz)	H.FREQ.(KHz)	BAND WIDTH(MHz)
720*400	85	37.92	35.5
640*480	60	31.469	25.175
640*480	72	37.86	31.5
640*480	75	37.5	31.5
800*600	56	35.156	36
800*600	60	37.88	40
800*600	72	48	50
800*600	75	46.875	49.5
1024*768	60	48.363	65
1024*768	70	56.476	75
1024*768	75	60	78.75
1152*864	75	67.5	108
1280*720	60	45	88
1280*960	60	60	108
1280*1024	60	63.981	108
1360*768	60	47.7	85.5

Glossary-Standard Definitions

Analog TV: Today's TV system using radio frequency waves to transmit and display pictures and sound.

Aspect Ratio(4x3): Traditional TV "aspect ratio", that is, the screen's width as compared to its height. For example, a "32 inch TV screen" would be 25 inches wide and 19 inches tall.

Aspect Ratio(16x9): "Wide screen TV" aspect ratio, which is more like a movie screen than a traditional TV. For example, a "32 inch TV screen" would be 28 inches wide and 16 inches tall.

Digital TV(DTV) : Television delivered and displayed using radio frequency waves that contain information that is digitally encoded for improved quality and efficiency.

Enhanced Definition TV(EDTV): A better digital television transmission than SDTV with at least 480p, in a 16x9 or 4x3 display and Dolby digital surround sound. 480p is the quality used by most DVD players. EDTV provides 300-400,000 pixels.

HDTV Monitor (sometimes called HDTV Ready): A set that can display HDTV programming if you have a separate HDTV tuner, HD Cable Set-Top Box or HD Satellite Set-Top -Box Receiver.

HDTV Tuner(also decoder, receiver, set-top box): A device capable of receiving and outputting HDTV signals for display. It may be stand-alone or integrated in the set.

High-Definition Television(HDTV): The best quality digital picture, wide screen (16x9) display with at least 720 progressively scanned lines(720p) or 1080 interlaced lines (1080 i) and Dolby digital surround sound. HDTV provides 900,000-2.1 million pixels.

Integrated HDTV: An HDTV that has the digital tuner built into the set. It does not need a separate set-top box to receive over-the-air DTV signals. progressively scanned lines (480p) in 16x9 or 4x3 format. 480 interlaced (480i) is the quality of today's analog TV system. SDTV provides 150-300,000 pixels.

Interlace Scan: A way to scan vertical lines onto a TV picture by scanning all the odd lines first, then filling in the even lines (this happens instantaneously).

Plug-and-Play or Digital Cable Ready: A DTV or other device for digital cable customers that plugs directly into the cable jack and does not require a separate set-top box. Plug and Play TV owners must obtain a Cable CARD from their cable company in order to view scrambled programming services.

Progressive Scan: A way to scan vertical lines onto a TV picture by scanning all the lines consecutively (progressively).

Standard Definition TV(SDTV): Basic digital television transmission that may be displayed with fewer than 480.